

Side Table Light user manual

CAUTIONS

- Please check if there is any damage to the appearance before usage.
- Never attempt your own maintenance.
- Avoid detaching the LED parts in a wet environment.
- Avoid dropping and strong impact.
- Use recommended batteries written in this user manual.
- Batteries are NOT included.

PRODUCT INFORMATION

 
 
LED Type	Cree-MX-6
Color Temperature	3000~3300K
Color Rendering	70
Consumed Power	0.5W
Battery Type	NI-MH Battery×4; 4 AA Alkaline Battery×4 (Do NOT use Lithium Batteries)
Battery Size	AA (external diameter : 14.5mm)
Battery Life	8~12hr
Waterproof Level	IP54

 
Note: Do NOT recharge alkaline batteries!

Do not mix old and new batteries, Do not mix alkaline batteries, standard (carbon-zinc batteries) or rechargeable (nickel cadmium batteries).


-----PREPARING THE SIDE TABLE LIGHT-----

– INSERTING THE BATTERY.....

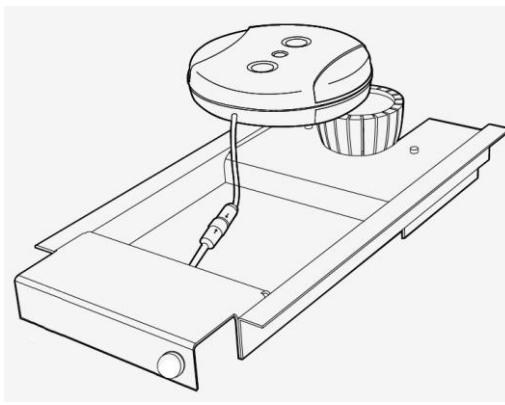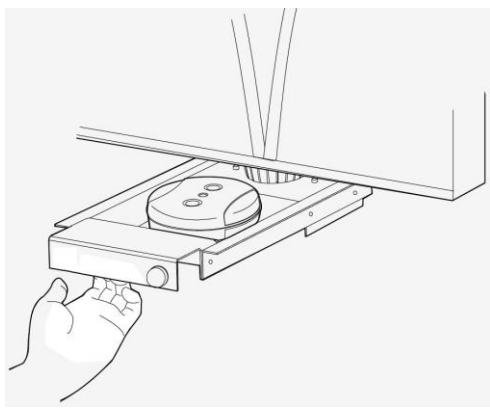


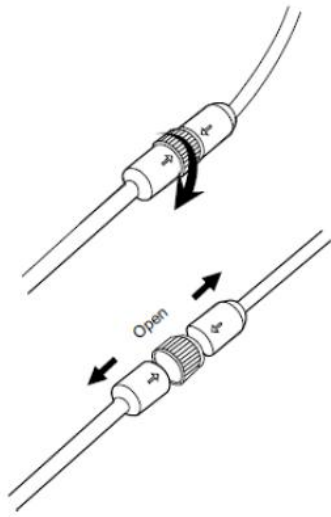

 1. Pull out the battery drawer until the stopper hits the frame, and lift out the battery box.
2. Rotate to release the locking screw, and then detach the battery box from the system.

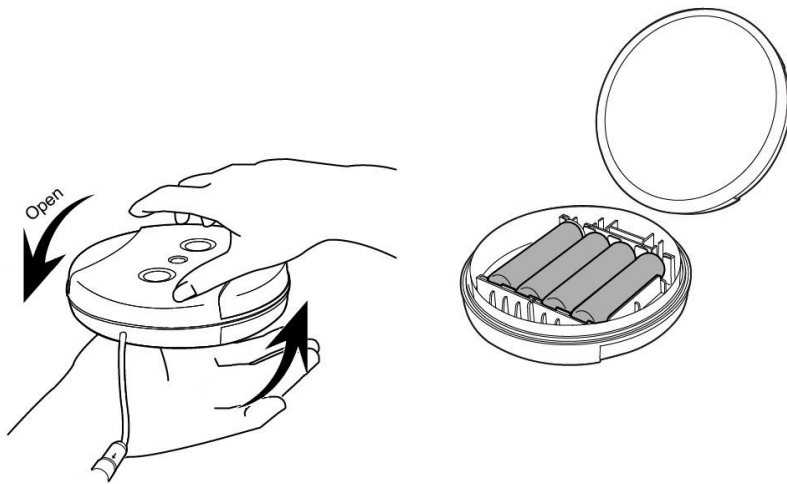


3. Unscrew the battery box lid counter-clockwise to open and insert or change the batteries.

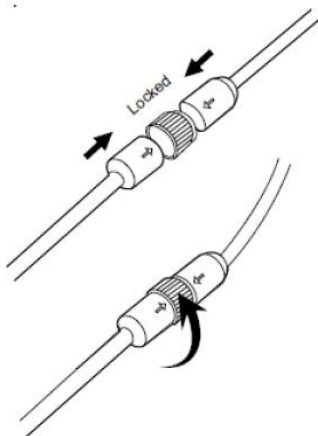

4. Re-fit the battery box lid and then re-attach and secure the locking screw to connect the battery box with the system.

-----**USING THE LANTERN**-----

 – **OPERATING THE LIGHT.....**

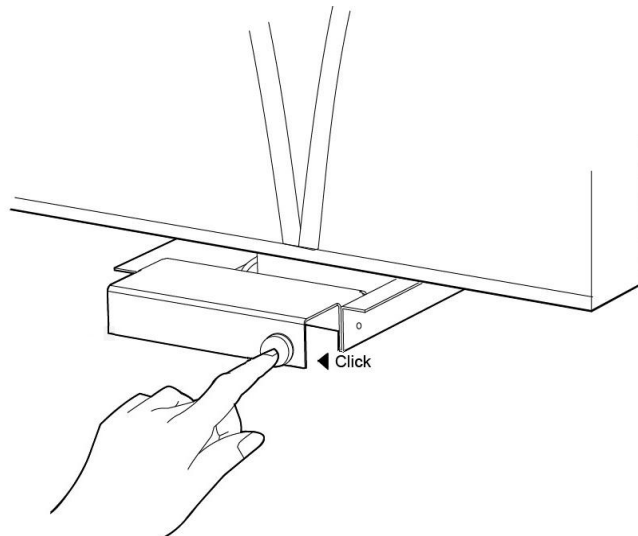

- Press the switch to turn on/off the light.

Note:- When the battery power is very low the LED lights will flicker. This is an indication that the batteries need to be replaced.